

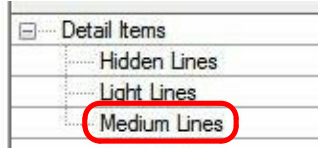


RevitWorks Flashings Specification



Object Styles Used

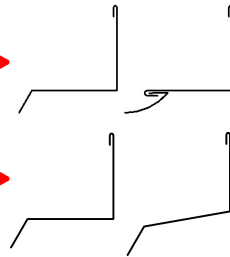

Apron Instance Parameters

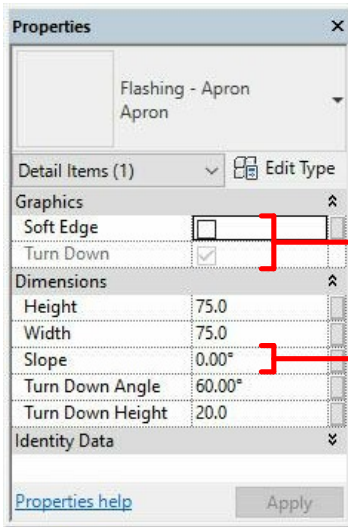



Barge Instance Parameters

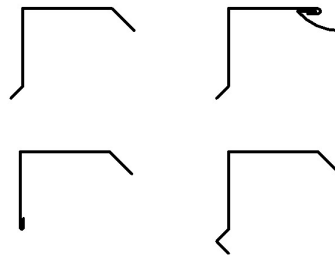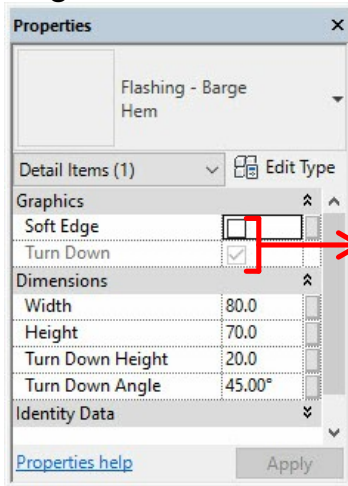

Barge Types included

- Flashing - Barge
- Birdbeak
- Flyout
- Hem

 

Corner Instance Parameters

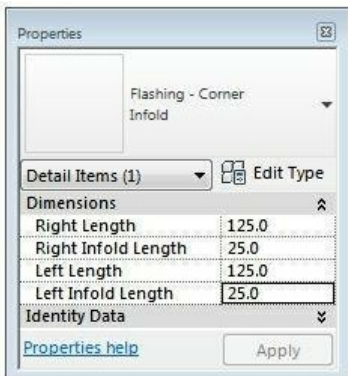


Corner Types included

- Flashing - Corner
- Infold
- Normal

Cap Instance Parameters

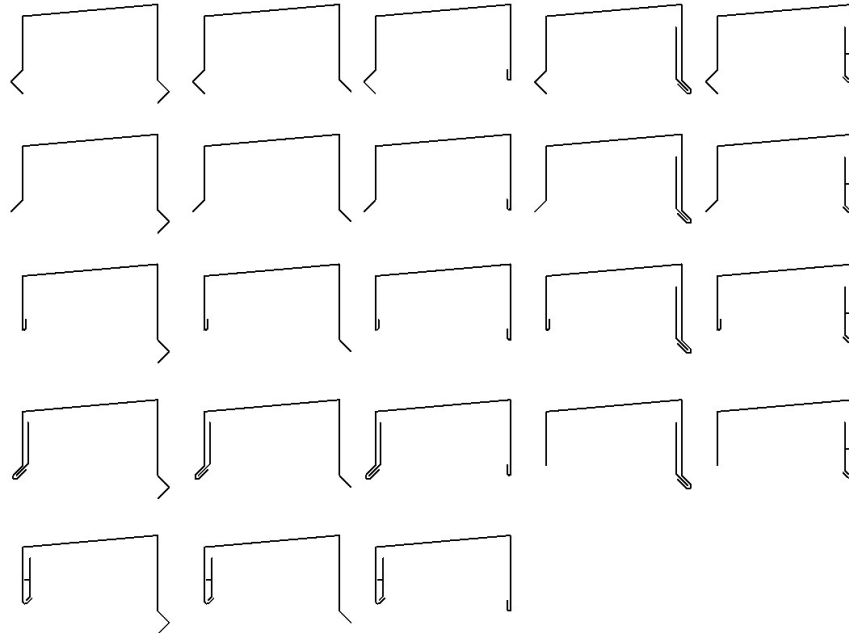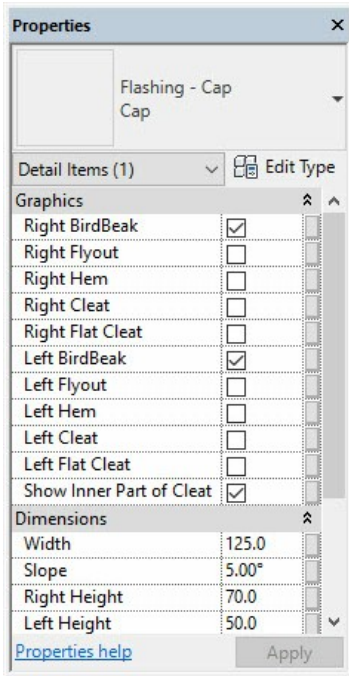


Eave Instance Parameters


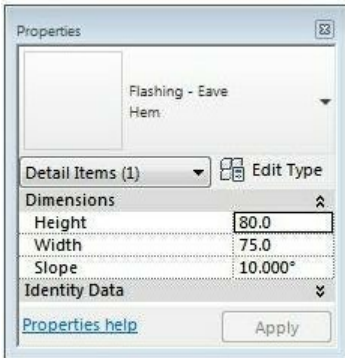


Eave Types included

- Flashing - Eave
- Birdbeak
- Flyout
- Hem

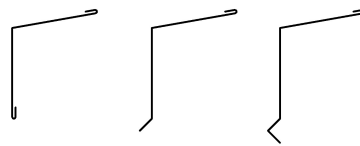


"L" Instance Parameters

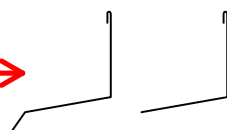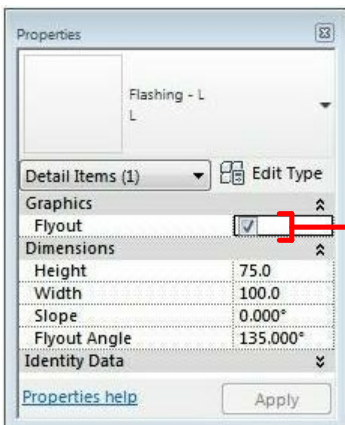


RevitWorks Flashings Specification

Ridge Instance Parameters


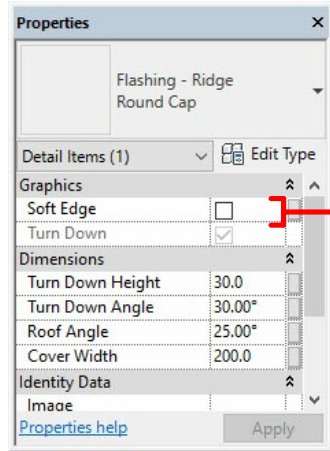


Ridge Type Parameters


- Flashing - Ridge
- Round Cap
- Square Cap

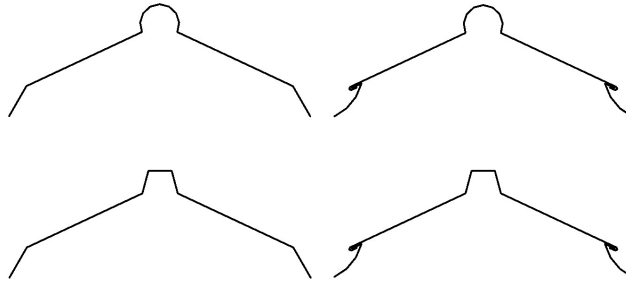

Trough Instance Parameters

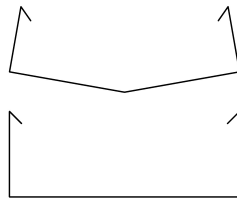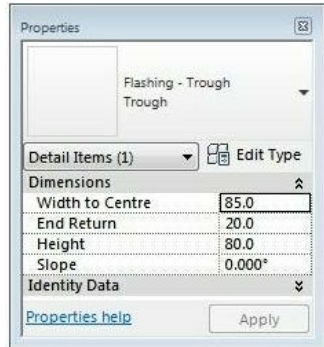


"Z" Instance Parameters

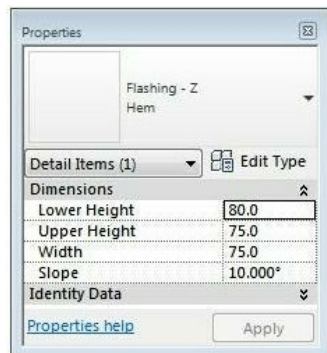


"Z" Types included

- Flashing - Z
- Birdbeak
- Flyout
- Hem

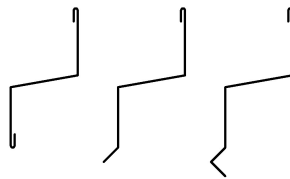

Miscellaneous Instance Parameters

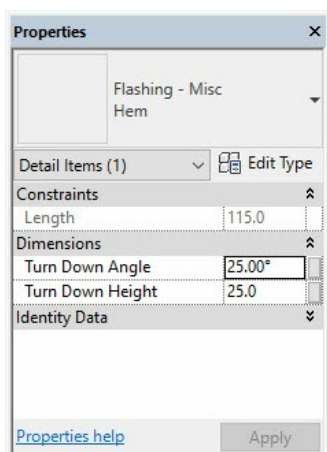

Miscellaneous Types included

- Flashing - Misc
- BirdBeak
- Cleat
- Flat
- Flat Cleat
- Flyout
- Hem
- Soft Edge
- Turn Down

