

## RevitWorks Door Factory: Multiple User Configuration

Recommended configuration for the RevitWorks Door Factory Premium.

Previous/ more recent versions are similar where the feature exists: substitute <2017> with the relevant version number.

The RevitWorks Door Factory has a multitude of components and settings that can be centralised to allow for the following:

- **Multiple users can access the same components (Panels, handles etc).**
- **Shared Parameter mapping settings can be setup and maintained throughout the company without having to continually change each users settings.**
- **These "customisable" components and settings etc can be part of the company servers backup routine.**

As well as this, the Door Factory relies on certain files that that reside on each users PC; these files can be copied between PC's:

- **Default Values**
- **Default Naming**
- **Default Orientation**

### Recommendations:

#### Centralise Family Components

#### Centralise Parameter Mapping Settings

#### Copy Default Values to users PC's

#### Copy Default Naming to users PC's

#### Copy Default Orientation to users PC's

Default Settings
✕

---

Door Factory Component Location

Metric Components  
 ...

Imperial Components  
 ...

---

Parameter Mapping

Map Parameters

Conversion File Location  
 ... Edit

---

Default Values

Metric (millimeters)  Imperial (decimal inches)


PARAMETER NAME	DEFAULT	COMMENTS
<b>ACTION</b>		
Pivot Offset	60	For pivot doors
<b>JAMB</b>		
Jamb Depth Specified	100	For all jambs when jamb doesnt match the wall thickness
Jamb Width	20	For all jambs
Jamb Head Width Specified	40	For jamb head when different than side jamb
Jamb Protrusion Past Wall	20	For Jambs that wrap the wall
Doorstop Width	20	For rebated and stop jambs
Doorstop Depth Specified	40	For stop jambs when not centred on jamb
<b>PANEL</b>		
Panel Protrusion into Opening	0	For all Sliding doors except for reverse sliders
Panel Width	810	For all doors
Secondary Panel Width	810	For standard double doors
Non Equal Primary Panel Width	810	For curtain panel double doors
Panel Height	1980	For all doors
Panel Thickness		The default value is read from the panel's family
<b>TOLERANCES</b>		
Structural Tolerance	10	For all doors with jambs
Panel to Head Gap	1	For all doors with jambs except for surface sliding doors

Default Orientation
Default Naming

Help
Cancel
OK

## Centralising Family Components

1. During the installation process, all of the Door Factory family components (panels, handles, trims and user components) get installed to C:\ProgramData\RevitWorks\Door Factory 2017\Components
2. Copy this component directory (and all subdirectories and files within it) onto a networked location of your choice within your company server.
3. Within the "Default Settings", change the Door Factory component locations to your new location (metric and imperial sub-directories) as below:

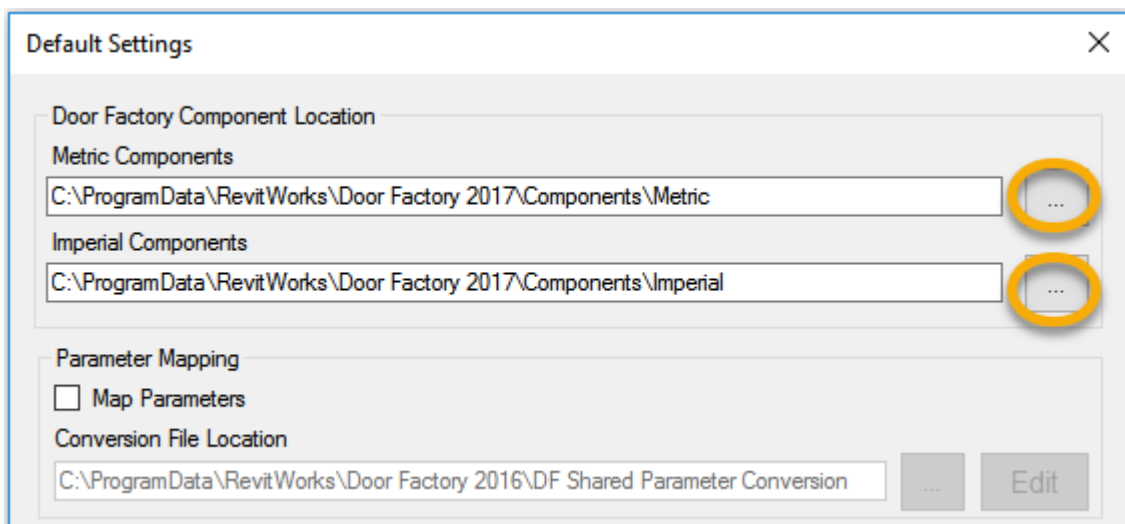

Alternatively, you can manually change the directory setting files by editing the stored location within the following text files:


C:\ProgramData\Door Factory 2017\ComponentDirectory\_M.txt for the metric component location

C:\ProgramData\Door Factory 2017\ComponentDirectory\_I.txt for the imperial component location

You can update other users by overwriting the text files (as above) on their PCs with your updated ones.

DO NOT move or rename these .txt files, the Door Factory relies on them.


## Centralising Parameter Mapping Settings

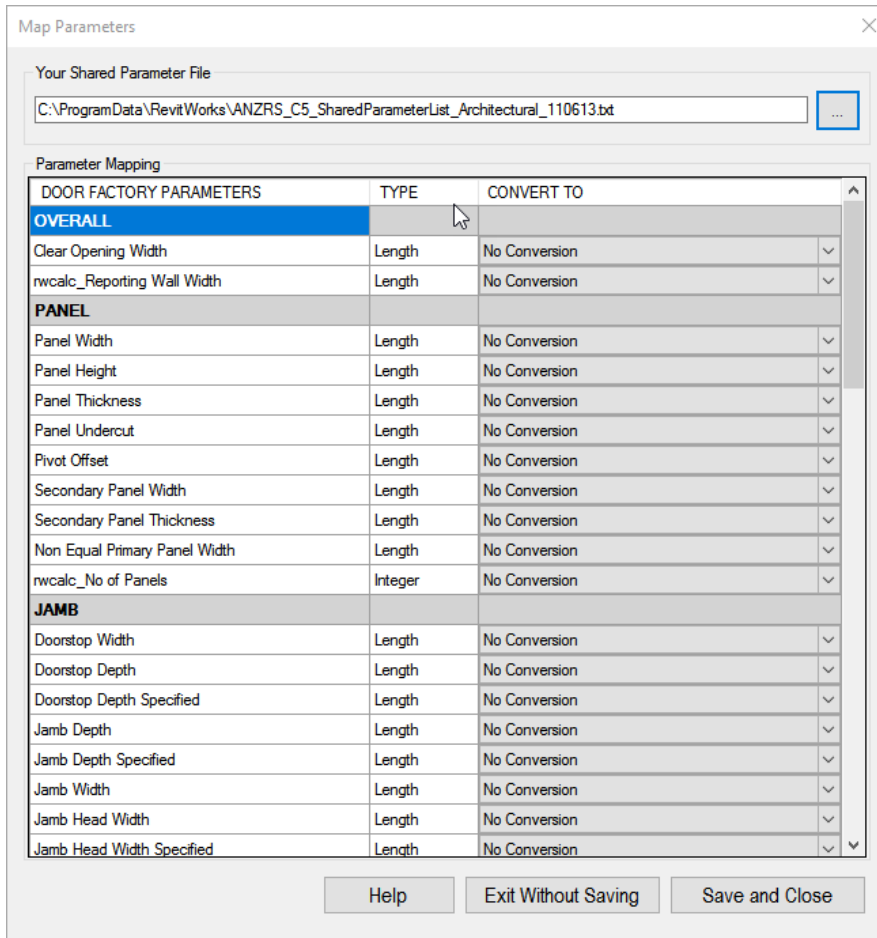

If/when you have mapped the Door Factory Parameters to your Shared Parameter file and names, all of those settings are saved within the following file:

C:\ProgramData\RevitWorks\Door Factory 2017\DF Shared Parameter Conversion\**DF Shared Parameter Conversion.txt**

1. Copy this .txt file directory onto a networked location of your choice within your company server.
2. Go to the Door Factory "Default Settings" and amend the "Conversion File Location" to point at the new location of the .txt file as below:

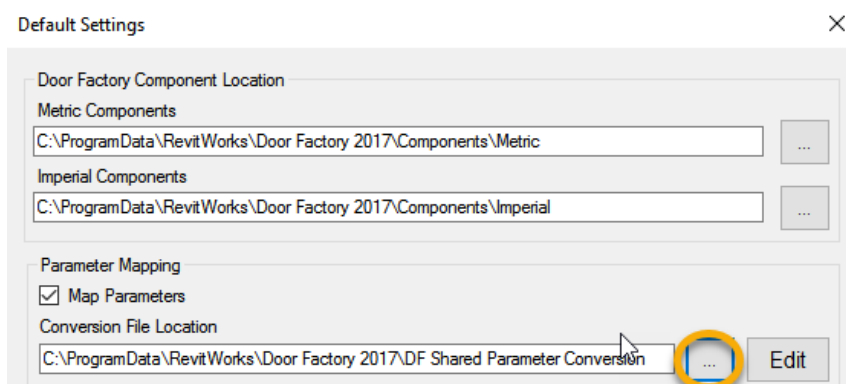

When you update this file location, the Door Factory saves that location within the following text file:

C:\ProgramData\Door Factory 2017\**SPC File Location.txt**

You can update other users by overwriting the text file (as above) on their PCs with your updated one. DO NOT move or rename this .txt file, the Door Factory relies on it.

## Copying Default Values

Default Values

Metric (millimeters)
  Imperial (decimal inches)

PARAMETER NAME	DEFAULT	COMMENTS
<b>ACTION</b>		
Pivot Offset	60	For pivot doors
<b>JAMB</b>		
Jamb Depth Specified	100	For all jambs when jamb doesnt match the wall thickness
Jamb Width	20	For all jambs
Jamb Head Width Specified	40	For jamb head when different than side jamb
Jamb Protrusion Past Wall	20	For Jambs that wrap the wall
Doorstop Width	20	For rebated and stop jambs
Doorstop Depth Specified	40	For stop jambs when not centred on jamb
<b>PANEL</b>		
Panel Protrusion into Opening	0	For all Sliding doors except for reverse sliders
Panel Width	810	For all doors
Secondary Panel Width	810	For standard double doors
Non Equal Primary Panel Width	810	For curtain panel double doors
Panel Height	1980	For all doors
Panel Thickness		The default value is read from the panel's family
<b>TOLERANCES</b>		
Structural Tolerance	10	For all doors with jambs
Panel to Head Gap	1	For all doors with jambs except for surface sliding doors


When you update the Default Values within the Default Settings dialog, the Door Factory saves these values within the following text files:

C:\ProgramData\Door Factory 2017\**DefaultValues\_M.txt** for the metric default values

C:\ProgramData\Door Factory 2017\**DefaultValues\_I.txt** for the imperial default values

You can update other users by overwriting the text files (as above) on their PCs with your updated ones. DO NOT move or rename these .txt files, the Door Factory relies on them.

## Copying Default Names

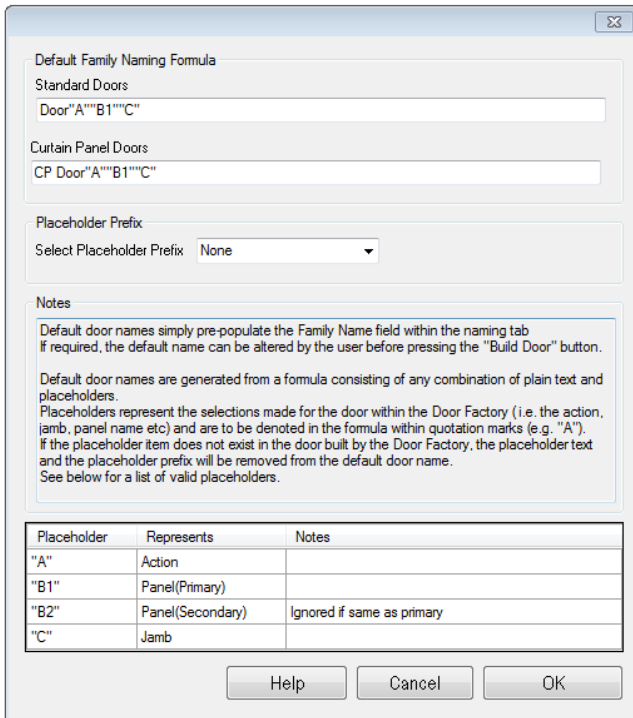


When you update the default naming formula, the Door Factory saves these values within the following text file:

C:\ProgramData\Door Factory 2017\**Default\_names.txt**

You can update other users by overwriting the text file (as above) on their PCs with your updated one. **DO NOT** move or rename this .txt file, the Door Factory relies on it.

## Copying Default Orientation

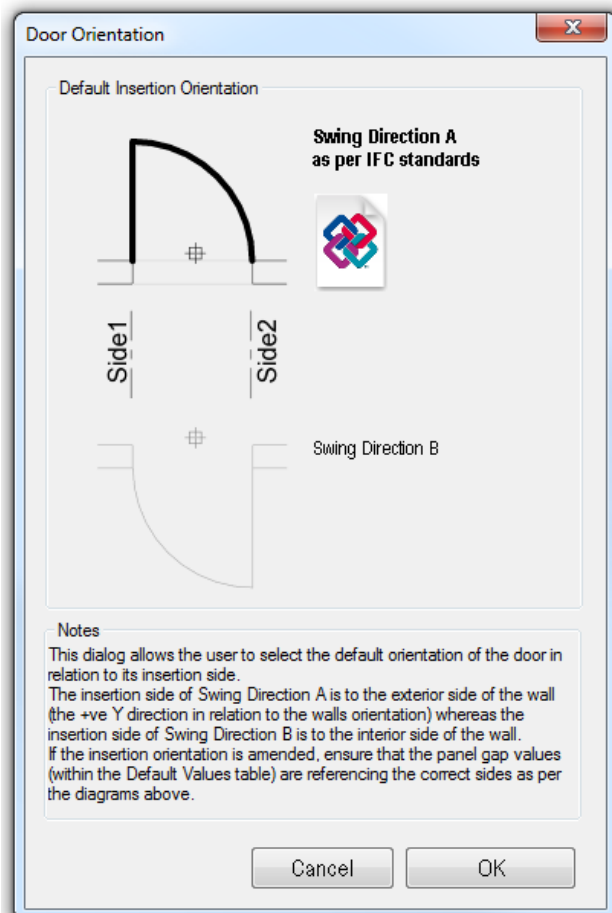

When you update the default orientation, the Door Factory saves these values within the following text file:

C:\ProgramData\Door Factory 2017\**Default\_orientation.txt**

You can update other users by overwriting the text file (as above) on their PCs with your updated one. **DO NOT** move or rename this .txt file, the Door Factory relies on it.

### Important!

If unchanged, the door factory orientation defaults to Swing Direction A. We recommend that you use this orientation since it ensures compliance with IFC standards.