








HVAC Equipment Specifications

Premium vrs Standard packages


This specification document covers both the RevitWorks Premium and Standard HVAC packages.
Please refer to the [RevitWorks HVAC Catalogue](#) for lists of the families and types provided within the different collections.

Object Styles Used

	Mechanical Equipment	All HVAC equipment (no sub-categories)
	Clearance Zones	Clearance zones within HVAC equipment
	Penetration Markers	Penetration marker families
	Detail Items	
	HVAC Dampers	Symbolic damper symbols (fixed size)
	Generic Annotations	
	HVAC Symbols	Symbolic HVAC symbols (annotative sized)

Symbols

Symbols are used within the RevitWorks HVAC equipment as follows




Detail Levels

All HVAC equipment (other than fans that break into pipes)

Coarse: Symbols, clearances and modelled elements
Medium: Symbols, clearances and modelled elements
Fine: Clearances and modelled elements only

HVAC Fans that break into pipes

Coarse detail level: Symbol in plan only
Medium detail level: Symbol, clearances and modelled elements
Fine detail level: Clearances and modelled elements only

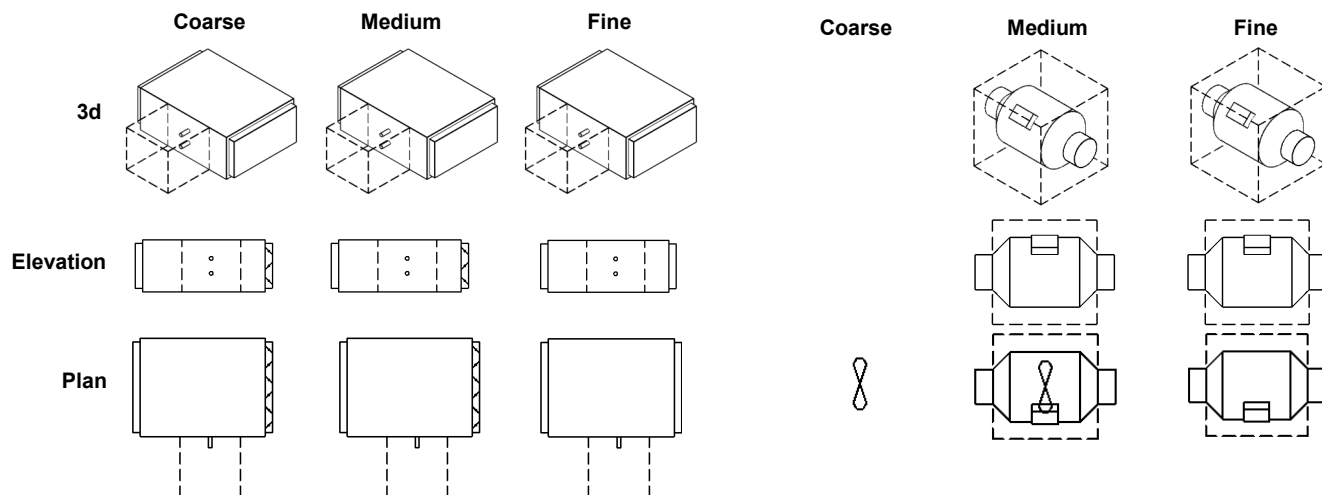

Use of Shared Parameters

Shared Parameters allow for additional usability compared to unshared parameters.

RevitWorks HVAC families have relevant shared parameters setup within them to allow for the following:

For Tagging and Scheduling:

Allows parameters to be scheduled and tagged

Includes:

All relevant parameters including
All flow parameters.
Plenum sizes
Materials

For Consistency

Allows families to be swapped with different families without instance parameters changing back to their default value

Includes:

All relevant instance parameters







For Internal Calculations

All parameters starting with "rw_calc" are internal parameters within the families that are required for the families internal workings. Being shared parameters allows RevitWorks to hide them when the family is in the project environment, making for a better user experience.

HVAC Equipment Specifications

Use of Materials

All solid elements within RevitWorks HVAC equipment are tied to logically named material parameters within the families. Most material parameters default to <By Category> (so that can be controlled project wide through the object style settings) but some have materials applied to ensure that they are ready for use (i.e. clearance zones, below ceiling fans, heat pump materials and penetration markers etc).

	RevitWorks Clearance Zones		RevitWorks Perforated Panel
	RevitWorks Grille		RevitWorks Plastic, White
	RevitWorks Penetration Markers		RevitWorks Steel, Galv

Hint: If you want all the materials to default to <By Category>, delete these RevitWorks Materials from your project. However, we would recommend you do not delete the clearance zone material

Use of Omniclass codes

Revit ships with omniclass codes from a previous standard, not the more fit-for-purpose 2012 version. RevitWorks HVAC Families have been prepopulated with 2012 OmniClass codes (as well as out-of-the-box assembly codes).

Identity Data	
Copyright	RevitWorks Ltd
Assembly Code	D3040100
Assembly Description	Air Distribution Systems
OmniClass Number	23.33.41.15
OmniClass Title	HVAC Mixing Boxes

To update your Revit omniclass codes to the 2012 version, please download that version and install.

This will then allow you to filter by the omniclass numbers that we have used

[Instructions and file download from Autodesk here](#)

Pressure Loss Calculations

Pressure Drop and Loss Coefficient parameters have been included into all relevant HVAC families to ensure pressure loss calculations work as expected.

Pressure Drop parameters:

- They are always *instance based* (they differ depending on airflow rates through the equipment)
- Values should be entered by the user based on the relevant manufacturers datasheets
- They default to "0" to remind the user that they need filling in

Loss Coefficient parameters:

- They are always *type based* (they are a coefficient)
- Values should be entered by the user based on the relevant ASHRE table values
- Generally they default to "0", except for Supply Air FCU plenums, where the supply air spigot into the plenum defaults to 0.5

Mechanical - Flow	
Flow Inlet Air	0.00 L/s
Flow Outlet Air	0.00 L/s
Pressure Drop	0.00 Pa
Critical Path	<input checked="" type="checkbox"/>
Identity Data	Pressure Drop
Phasing	Please enter the value from the manufacturers datasheet


Mechanical	
Loss Coefficient Rect In	0.500000
Loss Coefficient Rect Out	0.000000
Loss Coefficient Round Out	0.000000
Classification	None
Ident	Loss Coefficient Round Out
Other	Please enter the loss coefficient from the relevant ASHRE table, it will be used in pressure loss calculations.

Use of Room Calculation Points

FCUs, VAVs, inline fans (that break into pipes) and attenuators (i.e. gear above the ceiling that needs servicing) have room calculation points within them that extend down towards the rooms below by ~1metre, or 40".

This means they can then be located and/or scheduled by room (i.e. they are aware of the room below them).

If these components are higher than ~1 metre, or 40" above the rooms below, then to make them room aware, one has to edit the individual families and extend the room calculation point down further.

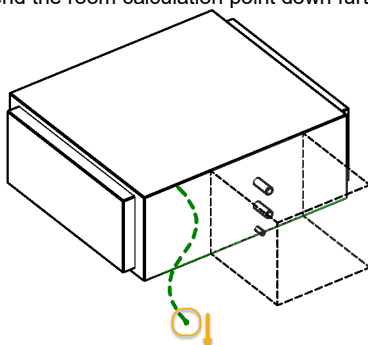


HVAC Equipment Specifications

Placing families: On Work Planes, Faces or Vertical Faces

Most of the RevitWorks HVAC families are workplane based (meaning that they can be placed on workplanes or faces of other objects), but some have been created as facebased families (meaning that they can easily be placed on vertical surfaces as well).

These facebased families include split systems wall units, surface mounted fans and penetration markers.

Since they are face-based, placement option could default to "Place on Vertical Face" which is only really useful for placing on walls - so change as need be to one of the other choices:

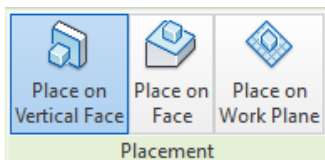

Place on Face: (recommendation)

Use this option if ceilings etc are in the same file you are working in.


Place on Work Plane: (recommendation)

Use this option if ceilings etc are in a linked file

Typical Instance Parameters for FCU Plenums


All of the RevitWorks HVAC equipment do not use instance parameters except for flow parameters (for air and/or liquids) as relevant. However, FCU plenums come with instance parameters to control the positions of all of their spigots. The exact name and number of spigots depend on what family you are using.

Example of instance parameters for a FCU plenum with 2 return air spigots:

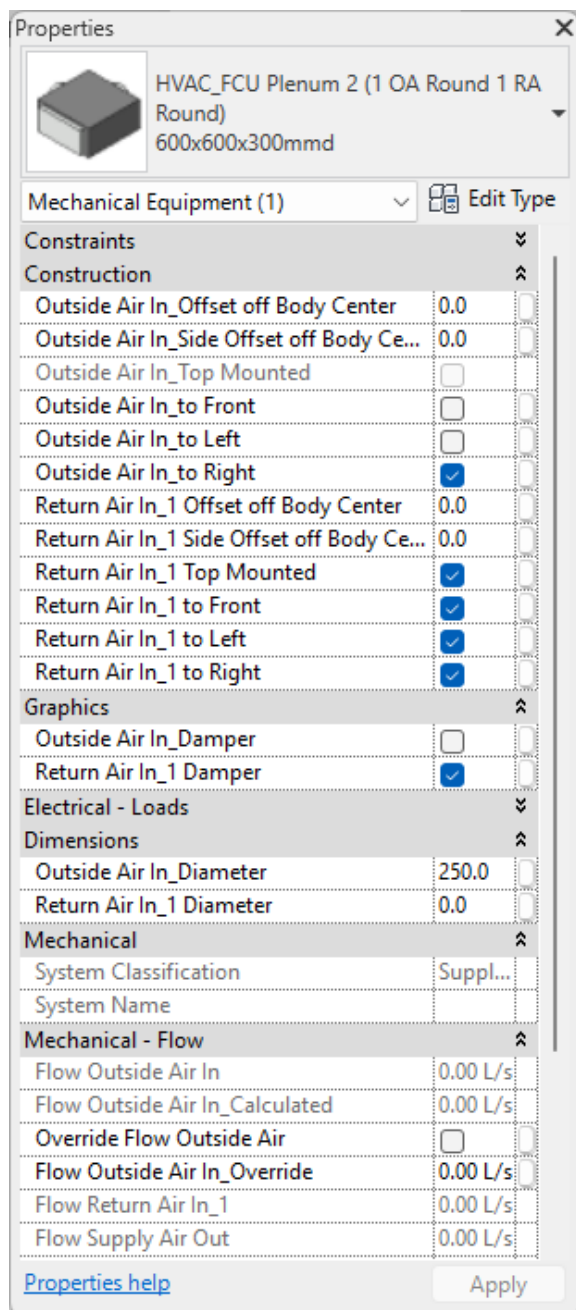


Tick/untick location controls are provided for **each** spigot. Offsets are provided to allow you to place the spigot exactly where required. (+ve and -ve values are accepted).

Exact name varies depending on the plenum type.

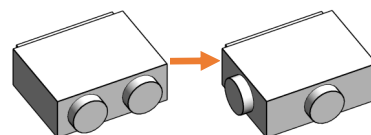

Adds damper symbols to the spigots in plan and elevation

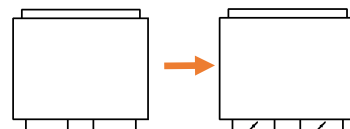

Amends the sizes of the spigots to suit the duct sizes joining them

Revit system information. Gets filled out automatically when systems are created and named.



Outside air flow controls. By default the "Flow Outside Air In" will match the "Flow Outside Air In_Calculated" and can be overridden if required. The "Flow Outside Air In_Calculated" parameter = (Flow Supply Air Out - Flow Return Air)

Calculated air flows. Gets filled out when systems are created

HVAC Equipment Specifications

Special Airflow Mismatch Parameters

RevitWorks return air plenums and AHUs contain special airflow mismatch parameters if the combination of return, exhaust and outside air flows do not match the supply airflow.

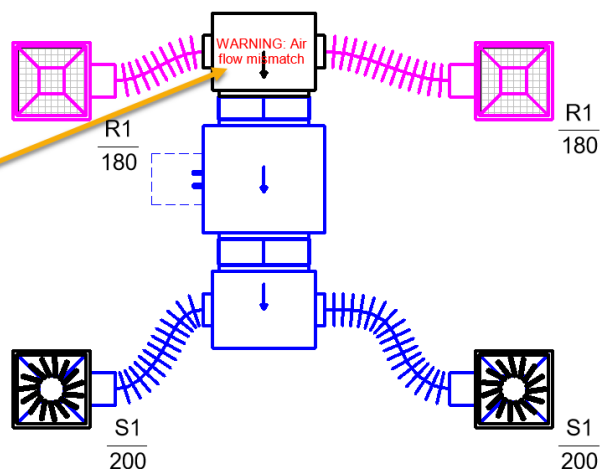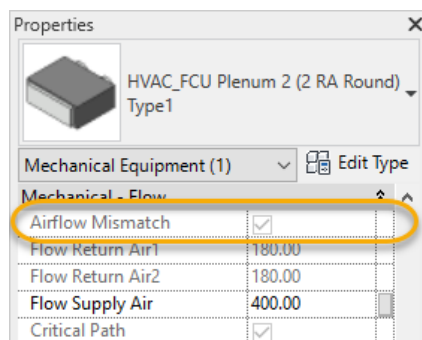

Highlight in Schedule

By scheduling the Airflow mismatch parameter, you can conditionally format the cell to highlight the mismatches:


D	E	F	G	H	I
Family	System Name	Flow Return Air1	Flow Return Air2	Flow Supply Air	Airflow Mismatch
HVAC_FCU Plenum 2 (2 RA Round)	SA 9, Mechanical Return A	180	180	400	Yes
HVAC_FCU Plenum 2 (2 RA Round)		250	50	300	No

Graphical control



By default, the graphical warning message above shows whenever there is a mismatch (recommended). If this is not desired, you can untick the warning parameter within the families type parameter dialog:


Hint: Link this parameter through to a global parameter within your project so you can turn this parameter on and off for multiple families project-wide

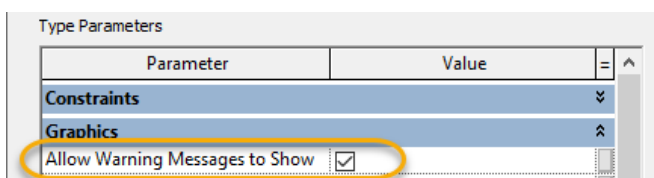


Typical Type Parameters

All of the RevitWorks HVAC equipment have material and dimensional type "plain english" parameters that and can be changed as required to make new types (or amend existing types). The exact names (and numbers of) the parameters depend on what family you are using.

Example of dimensional and material type parameters for Louvres:

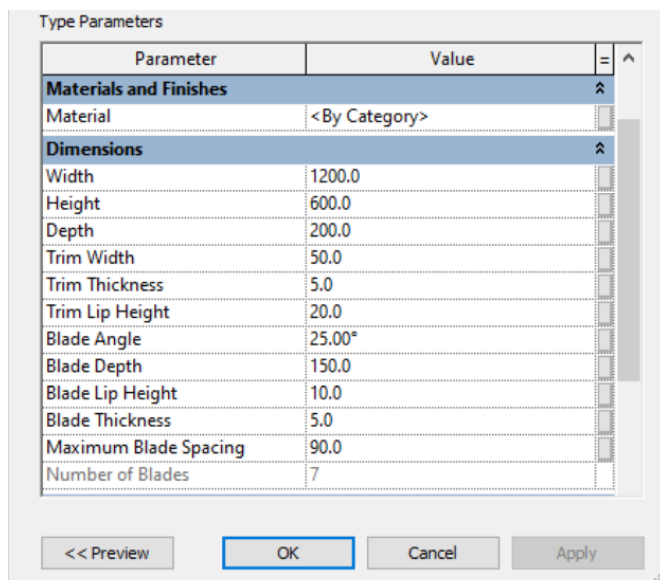

Example of dimensional and material type parameters for AHUs:

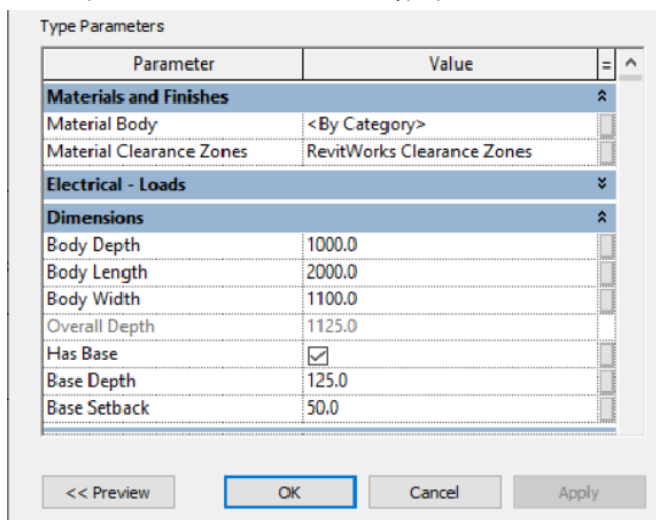

HVAC Equipment Specifications

Additional Type Parameters for Duct spigots

AHUs, FCUs, HRUs and VAV units have additional type parameters for duct connections.

The exact names (and numbers of) the parameters depend on what duct connections the families that you are using have.


Duct spigots are provided for Supply Air, Return Air, Exhaust Air and Outside Air where relevant

Type Parameters

Parameter	Value
Construction	
Outside Air In_Offset off Body Center	0.0
Outside Air In_Side Offset off Body Center	0.0
Outside Air In_Top Mounted	<input type="checkbox"/>
Outside Air In_to Back	<input type="checkbox"/>
Outside Air In_to Front	<input type="checkbox"/>
Outside Air In_to Left	<input checked="" type="checkbox"/>
Outside Air In_to Right	<input type="checkbox"/>
Supply Air Out_Offset off Body Center	0.0
Supply Air Out_Side Offset off Body Center	0.0
Supply Air Out_Top Mounted	<input type="checkbox"/>
Supply Air Out_to Back	<input type="checkbox"/>
Supply Air Out_to Front	<input type="checkbox"/>
Supply Air Out_to Left	<input type="checkbox"/>
Supply Air Out_to Right	<input checked="" type="checkbox"/>
Dimensions	
Outside Air In_Flange Depth	50.0
Outside Air In_Height	400.0
Outside Air In_Width	600.0
Supply Air Out_Flange Depth	50.0
Supply Air Out_Height	800.0
Supply Air Out_Width	1000.0

<< Preview OK Cancel Apply

Tick/untick location controls are provided for **each** spigot. Offsets are provided to allow you to place the spigot exactly where required. (+ve and -ve values are accepted).

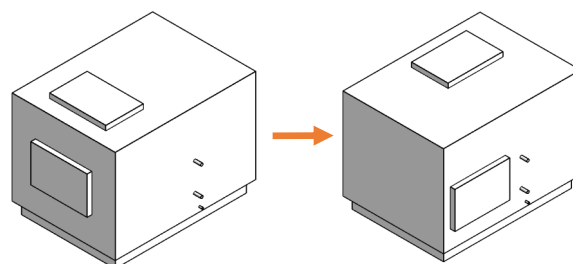

Dimension control for the relevant spigot.

Additional Type Parameters for Pipe spigots

AHUs, FCUs, Split Systems, HRUs and VAV units have additional type parameters for piping connections.

The exact names (and numbers of) the parameters depend on what pipes the families that you are using have.

Abbreviations:

COND =Condensation

CHW =Chilled water

HHW =Hot water

REF =Refrigerant


Type Parameters

Parameter	Value
Other	
CHW Flow In_Depth	75.0
CHW Flow In_Diameter	25.0
CHW Flow In_Offset off Body Center	0.0
CHW Flow In_Side Offset off Body Center	100.0
CHW Flow In_Top Mounted	<input type="checkbox"/>
CHW Flow In_to Back	<input type="checkbox"/>
CHW Flow In_to Front	<input checked="" type="checkbox"/>
CHW Flow In_to Left	<input type="checkbox"/>
CHW Flow In_to Right	<input type="checkbox"/>
CHW Return Out_Depth	75.0
CHW Return Out_Diameter	25.0
CHW Return Out_Offset off Body Center	-300.0
CHW Return Out_Side Offset off Body Center	100.0
CHW Return Out_Top Mounted	<input type="checkbox"/>
CHW Return Out_to Back	<input type="checkbox"/>
CHW Return Out_to Front	<input checked="" type="checkbox"/>
CHW Return Out_to Left	<input type="checkbox"/>
CHW Return Out_to Right	<input type="checkbox"/>

<< Preview OK Cancel Apply

Dimension control for the spigot.

Tick/untick location controls are provided for **each** spigot. Offsets are provided to allow you to place the spigot exactly where required. (+ve and -ve values are accepted).

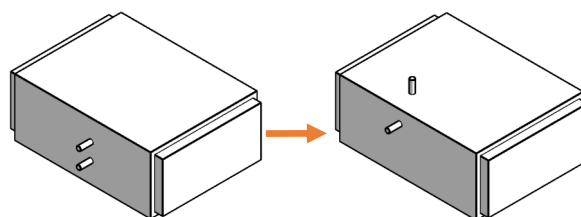

HVAC Equipment Specifications

Additional Type Parameters for Electrical connectors

AHUs, FCUs, VAVs, CRACs, HRUs, Split Systems and fans have additional schedulable parameters for their electrical connectors

Type Parameters

Parameter	Value
Electrical - Loads	
Apparent Load Phase 1	200.00 VA
Apparent Load Phase 2	0.00 VA
Apparent Load Phase 3	0.00 VA
Load Classification	HVAC
Load Sub-Classification Motor	<input checked="" type="checkbox"/>
Number of Poles	3
Power Factor	0.950000
Voltage	240.00 V

<< Preview OK Cancel Apply

Additional Type Parameters for Clearance Zones

AHUs, FCUs, HRUs and VAV units have additional type parameters for clearance zone controls.
All can have up to 6 different clearance zones - one to each face.

Type Parameters

Parameter	Value
General	
Clearance Zone to Back	<input type="checkbox"/>
Back Clearance Width	400.0
Back Clearance Height	350.0
Back Clearance Depth	400.0
Back Clearance Offset off Body Center	0.0
Back Clearance Side Offset off Body Center	0.0
Clearance Zone to Base	<input type="checkbox"/>
Base Clearance Width	400.0
Base Clearance Height	400.0
Base Clearance Depth	400.0
Base Clearance Offset off Body Center	0.0
Base Clearance Side Offset off Body Center	0.0
Clearance Zone to Front	<input checked="" type="checkbox"/>
Front Clearance Width	400.0
Front Clearance Height	350.0
Front Clearance Depth	400.0
Front Clearance Offset off Body Center	0.0
Front Clearance Side Offset off Body Center	0.0
Clearance Zone to Left	<input type="checkbox"/>
Left Clearance Width	400.0
Left Clearance Height	350.0
Left Clearance Depth	400.0
Left Clearance Offset off Body Center	0.0
Left Clearance Side Offset off Body Center	0.0
Clearance Zone to Right	<input type="checkbox"/>
Right Clearance Width	400.0
Right Clearance Height	350.0
Right Clearance Depth	400.0
Right Clearance Offset off Body Center	0.0
Right Clearance Side Offset off Body Center	0.0
Clearance Zone to Top	<input type="checkbox"/>
Top Clearance Width	400.0
Top Clearance Height	350.0
Top Clearance Depth	400.0
Top Clearance Offset off Body Center	0.0

<< Preview OK Cancel Apply

Tick/untick location controls are provided for each of the different clearance zones.
Offsets are provided to allow you to place the zone exactly where required. (+ve and -ve values are accepted).

